

HELLER

Instruction Manual

Popcorn Maker

Model No.: HPM1100



Store and retain this instruction manual for future reference.


Important Safeguards

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions outlined in the instruction manual.
- Do not touch hot surfaces of the appliance. Use handles or knobs.
- To protect against electric shock do not immerse cord, plugs in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug the appliance from the power outlet when it is not in use and when cleaning. Allow the appliance to cool down before putting on or removing parts, and when repairing or adjusting.
- The use of accessory attachments not recommended by the appliance manufacturer may result in injuries.
- Do not use the appliance outdoors.
- Do not let the cord hang over any edges, including tables and counters or come into contact with any hot surfaces.
- Do not place on or near a gas or electric stove, or a heated oven.
- Extreme caution must be exercised when moving an appliance containing hot oil or other hot liquids.
- Always attach plugs to the appliance first, then plug the cord into the wall outlet. To disconnect, turn 'OFF' the appliance first at the switch, before removing the plug from power outlet.
- Do not use the appliance for anything other than its intended use.
- A popcorn popper that is plugged into a power outlet should never be left unattended.
- Extreme caution must be exercised when unloading popcorn. Always turn the over a counter top so that residual hot oil or water from the appliance will not cause burns.
- A short power supply cord is provided to reduce the risk of entanglement or tripping over the cord.
- If a long detachable power supply cord or extension cord is used, ensure the marked electrical rating of the cord or extension cord is at least the same as the electrical rating of the appliance.
- If the appliance is grounded, ensure the extension cord used is a 3-wire grounding cord.
- All requested breaks must be followed.
- Please refer to the rating label of the appliance for the maximum continuous usage time (KB 5 minutes is the maximum usage time).
- Breaks in between uses should be at least 10 minutes.
- This appliance is not intended to be operated my means of an external timer or separate remote-control system.
- For safety reasons a damaged or defective appliance and its parts should only be repaired by appliances service centre.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

Parts Description

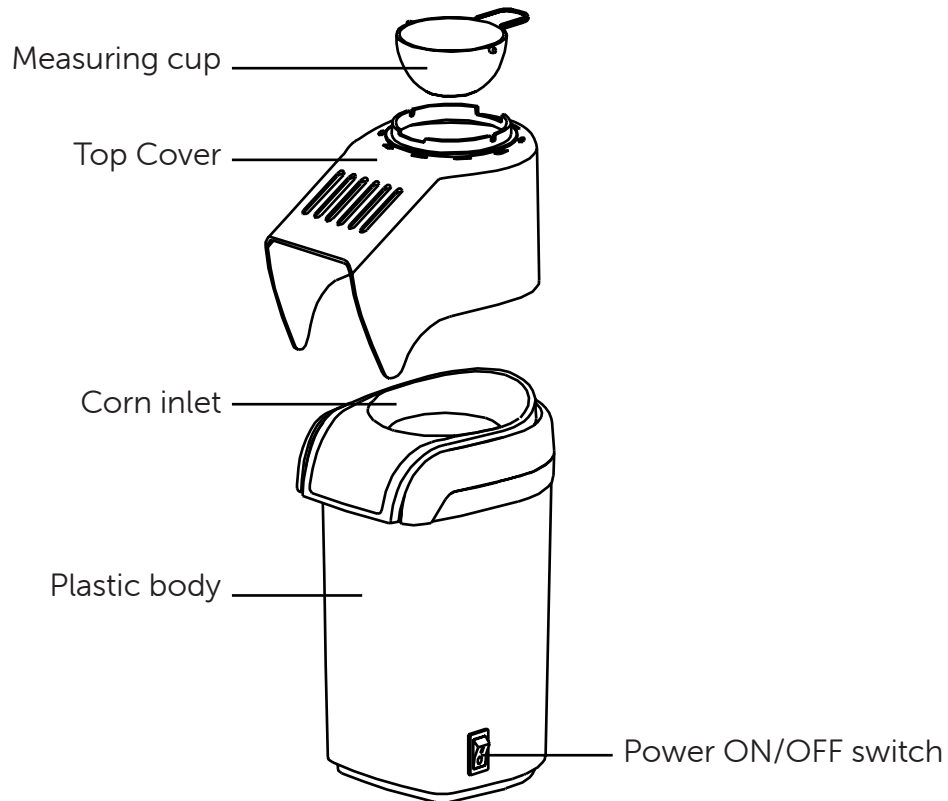

Using the popcorn maker

- Place the popcorn maker on a level surface.
- Before first use, it is recommended to wipe the popcorn maker and accessories with a damp cloth.
- Measure popcorn by using the provided measuring cup. One full cup per session is enough. More than one cup could over fill the popcorn maker and disturb the intended functionality of the popcorn maker.
- Preheating of the appliance is not necessary.
- Do not add other ingredients such as: oil, shortening, butter, margarine, salt, or sugar into the appliance, as damage will occur.
- Pour popcorn into the aluminium heat chamber through the corn inlet.
- Replace the measuring cup into position inside the top cover after every use.

- Ensuring the top cover is properly positioned, place a large bowl under the spout so that the edge of the bowl is touching the body of the popcorn maker. It is important that the popcorn ejects down the spout into the bowl and not re-directed, blocked or otherwise interfered with, as the popcorn is hot and contact may cause minor discomfort.
- Switch on the popcorn maker. After a few moments a continuous popping action will automatically feed popcorn from the aluminium heat chamber out through the spout until all the kernels have been popped. This process will last for around 3 minutes.
- Turn off the popcorn maker and remove the mains plug from the mains supply when popping has stopped.
- If more popcorn is required, remove the popcorn remaining in the aluminium heat chamber. Caution must be undertaken when handling the top cover as this part as well as the measuring cup is extremely hot when the popcorn maker is functioning.

NOTE: DO NOT USE THE APPLIANCE FOR LONGER THAN 15 MINUTES CONTINUOUSLY. Wait for approximately 10 -12 minutes before using the popcorn maker again.

Warnings

- Popcorn is usually very dry.
- Place the measuring cup on top of the top cover, butter side up.
- Never put butter or other additives other than corn kernels in the aluminium heat chamber.

Cleaning and maintenance

- Before cleaning, remove the mains plug from the mains supply.
- Ensure the popcorn maker has cooled down completely before cleaning.
- Clean the plastic parts of the popcorn maker with a damp cloth. Never use abrasive products as they could damage the appliance.
- The top cover and the measuring cup can be cleaned in warm soapy water.

Storage

- When the popcorn maker is not in use, disconnect the popcorn maker and store in a safe, dry place, out of reach of children.

Customer Service

Before making a claim under warranty, please refer to your instruction/installation manual to ensure that you have followed the correct operation procedures of your product.

Contact information

Australian Customer Service

GAF Control (Sales) Pty Ltd

P.O Box 19

Altona North Victoria, 3025

Phone: 1300 659 489

Hours: 9AM - 5PM (EST) Monday - Friday

www.gafcontrol.com.au

*This product may vary slightly to the product illustrated due to ongoing product development.

HPM1100

220-240V, 50/60Hz, 1100W, Class I