

# **HELLER**

 
*100% Australian Owned Company*

## **FREEZER**

### **PPF175**

---

---

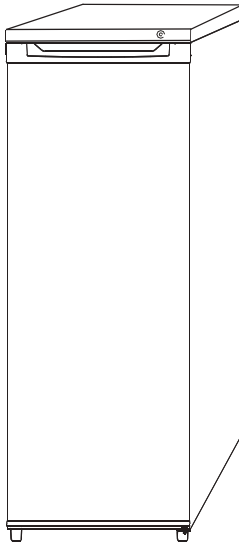

## **Instruction Manual**

# Thank you for buying our refrigeration products.

To enable you to use your appliance effectively and safely, please read this instruction book carefully before using the appliance and retain for future reference.

## Guide to use the instruction book

The following Symbols will be found in the text to guide you through the instructions



**Safety Instructions**



**Hints and Tips**



**Step by step instructions  
for operation**



**Environmental Information**

# IMPORTANT SAFETY INSTRUCTIONS

These warnings are provided in the interests of your safety. Ensure that you understand Them all before installing or using this appliance. Your safety is of paramount importance. If you are unsure about any of the meanings or these warnings contact the Customer Care Department.

## Installation

- This appliance is heavy. Care should be taken when moving it.
- It is dangerous to alter the specifications or attempt to modify this product in any way.
- Ensure that the appliance does not stand on the electrical supply cable. If the supply cord is damaged, it must be replaced by a special cord available from your Local Service Centre.
- Any electrical work required to install this appliance should be carried out by a qualified technician or competent person.
- Whenever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation as stated in the installation instructions.
- The appliance should be left for 3 hours after installation before it is turned on, in order to allow the refrigerant to settle.

## Child Safety

- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.

## During Use

- This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs only.
- Frozen food should not be refrozen once it has thawed out.
- Do not place carbonated or fizzy drinks in the freezer.
- Ice lollies can cause 'frost/freezer burns' if consumed straight from the freezer.
- Do not remove items from the freezer if your hands are damp/wet, as this could cause skin abrasions or frost/freezer burns.

## Maintenance and Cleaning

- Switch off, and unplug the appliance before carrying out any cleaning or maintenance work.

- Do not use sharp instruments to scrape off frost or ice. (See defrosting instructions).

**CAUTION: You must not use any mechanical device to speed up the defrosting process.**

**Do not damage the refrigerant circuit.**

**You must not use any electric appliance inside the appliance except those that are recommended by the manufacturer.**

## Servicing

- This product should be serviced by an authorised service agent, and only genuine spare parts should be used.
- Under no circumstances should you attempt to repair the machine yourself. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local Service Centre.

## At the End of the Appliance Life

**NOTE: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Ensure that the door cannot jam (removing it is best), regardless of whether or not it can be pushed open from inside. Also check council guide.**

**AN OLD APPLIANCE CAN BE A DEADLY PLAYTHING FOR CHILDREN!**



Please read this instruction book carefully before use and retain for future reference.

# TABLE OF CONTENTS

## For the User

Important Safety Instructions 2

Description of the Appliance 4

Using Your Appliance 5

Before Use 5

Thermostat Controls 5

To Start The Appliance 5

The Freezer Compartment 6

*Freezing Fresh Food* 6

*Frozen Food Storage* 6

Hints and Tips 7

Normal Operating Sounds 7

Food Storage 7

Energy Saving Advice 7

In the Event of a Power Failure 7

Maintenance and Cleaning 8

Internal Cleaning 8

External Cleaning 8

To Defrost the Freezer 8

When the Appliance is Not in Use 8

What Happens if Something Goes Wrong 9

## For the Installer


Door Reversal 10

Installation Requirements 11

Ventilation Requirements 11

Levelling 11
 
# Description of the Appliance

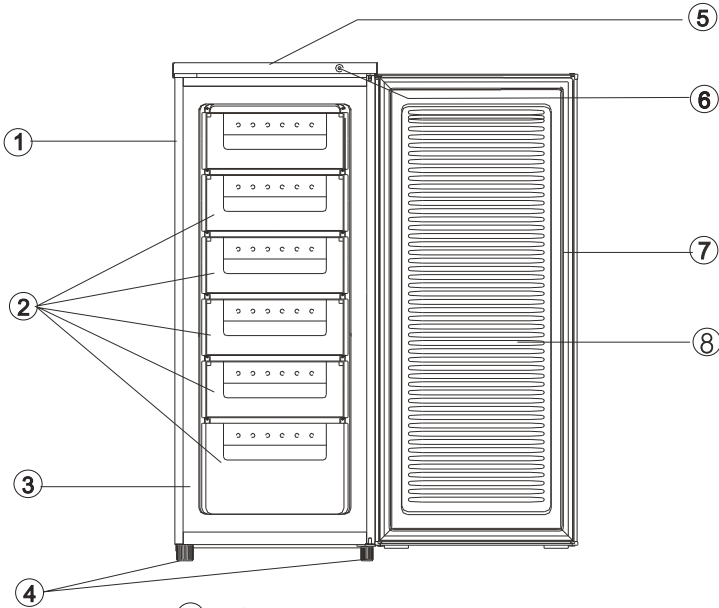


- ① Cabinet
- ② Wire drawer with plastic cover
- ③ Compressor(at the rear of cabinet)
- ④ Adjustable Feet
- ⑤ Worktop
- ⑥ Thermostat Adjustment Knob
- ⑦ Door Gasket
- ⑧ Door Assembly


## SETTING UP THE FREEZER
 
### Moving the Freezer

- In the interest of safety, it is strongly recommended that a minimum of two people move and set up the Freezer to prevent body injury and property damage.
- Do not lay the Freezer horizontally ( $90^\circ$  from the vertical) when moving as the compressor may get damaged in the process - the Freezer should not be declined more than  $45^\circ$  from the vertical position (refer to diagram opposite).
- It is important that the Freezer be moved only when empty. Where applicable, remove any food and pour out any water found in ice cube trays.

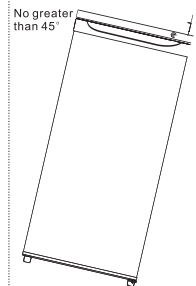

# USING THE APPLIANCE

 *This appliance is designed for domestic use only, specifically for the storage of edible foodstuffs.*

This appliance is designed to operate in ambient temperatures (surrounding air temperature) between 16°C (50 F) and 32°C

If these temperatures are exceeded i.e., colder or warmer, the appliance will not operate correctly. Should the ambient temperatures be exceeded for long periods, the temperature in the freezer section will rise above -18 C and food spoilage may occur.

## Before Use

Remove all securing tapes and foam under the condenser at the back of the cabinet. Wash the inside of the appliance with lukewarm water with a little bicarbonate of soda added (5ml to 0.5 litre of water). Do not use soap or detergent as the smell may linger. Dry the appliance thoroughly.

## Thermostat Control

The thermostat control situated in the control panel regulates the temperature of the freezer compartment.

Position MIN - Cold


Position MED - Colder. Normally set at this position.


Position MAX - Coldest

The temperature will be affected by:

- Room temperature
- How often the door is opened
- How much food is stored
- Position of the appliance

 
In determining the correct temperature control setting, all these factors have to be considered and some experimentation may be necessary

 *Do not allow children to tamper with the controls or play with the product.*

 *Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or products containing alcohol.*

## To Start the Appliance


1. Allow the appliance to stand for 2 hours after installation.
2. Plug in the appliance and switch on at the mains supply.
3. Turn the thermostat control to the required setting. A midway setting is usually suitable for normal operation (see thermostat control).
4. Leave the appliance for approximately 5 hours for the correct temperature to be reached before placing food inside.

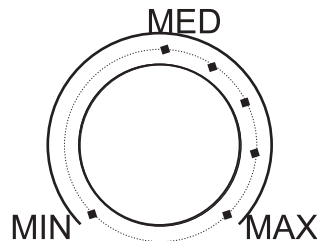

# The Freezer Compartment

The freezer temperature is controlled automatically by the thermostat situated in the control panel.

Due to the different installations, methods of usage and weather conditions, adjustments to the temperature settings may be required.


 These are best assessed against a temperature reading on a thermometer buried in the frozen food. The reading must be taken quickly as the thermometer temperature will rise rapidly after removal.

## Freezing Fresh Food

The maximum quantity of food you can freeze in 24 hours is 6.5kg. Place the fresh food on the freezer compartment. Food may need rearranging to achieve this.

During the freezing process the temperature of fresh food should be reduced quickly so that ice crystals are kept as small as possible to prevent damaging the structure of food. If freezing takes place slowly large ice crystals form and these will affect the quality of food once it has defrosted.

Packets to be frozen should be placed in the basket in contact with the baskets surface as far as possible and spaced apart to allow cold air to circulate between them. They should not touch existing packets.

 *Frozen food should not be refrozen once it has thawed out.  
Do not remove items from the freezer if your hands are damp/wet, as this could cause skin abrasions or 'frost/freezer burns'.*

## Frozen Food Storage

Pre packed commercially frozen food should be stored in accordance with the manufacturer's instructions and should be put in the freezer as soon as possible after purchase. Your freezer provides for long term storage which generally means up to 3 months but the length of the time can vary and it is important to follow the recommended times shown on packets of commercially frozen food.



*Do not place sealed containers or carbonated liquids such as fizzy drinks into the freezer as it creates pressure on the container which may cause it to explode resulting to damage to the freezer.*

*Ice cubes and ice lollies should not be consumed immediately after removal from the freezer as it may result in low temperature skin abrasions.*

*Manufacturers storage times should be adhered to.*



# HINTS AND TIPS

## Normal Operating Sounds

- You may hear faint gurgling or bubbling sounds when the refrigerant is pumped through the coils or tubing at the rear, to the cooling plate/evaporator.
- When the compressor is on, the refrigerant is being pumped round, and you will hear a whirring sound or pulsating noise from the compressor.
- A thermostat controls the compressor, and you will hear a faint 'click' when the thermostat cuts in and out.

## Food Storage

- To obtain the best results from your appliance, neither hot foods nor liquids which may evaporate, should be placed in the compartment.
- Avoid buying frozen food if you cannot store it straight away. The use of an insulated container is advisable. When you arrive home place the frozen food in the freezer immediately.
- Keep the time between buying chilled food and placing it in your freezer as short as possible.
- Do not push food together too much, try to allow air to circulate around each item.
- Do not store food uncovered.
- Ensure that food placed in the freezer is dated and labelled and used in date order to ensure that food is consumed at its best.
- Remove suspect food from your freezer and clean, refer to cleaning and maintenance.

## Energy Saving Advice

- Do not install the appliance close to sources of heat, such as a cooker, dishwasher or radiator.
- Locate the appliance in a cool well ventilated room and make sure that the air openings of the cabinet are not obstructed.
- Avoid unnecessary frosting in the cabinet by packing all foodstuffs into airtight packages before placing them in the freezer.
- Always leave warm food to cool down to room temperature before placing in the freezer.

- Food which is to be frozen (when cool) should be placed in the fridge before being transferred to the freezer.
- Thaw frozen food in the fridge. This will ensure safer defrosting of foods.
- Try to avoid keeping the door open for long periods, or opening the door too frequently as warm air will enter the cabinet, and cause the compressor to switch on unnecessarily.
- Ensure there are no obstructions preventing the door from closing properly.

## In the Event of a Power Failure

If there is a power failure during the storage of frozen foods, keep the door closed. If the temperature within your freezer should rise do not refreeze the food without checking it's condition. The following guidelines should assist you:

**Ice Cream:** Once thawed should be discarded.  
**Fruit and Vegetables:** If soft should be cooked and used up.

**Bread and Cakes:** Can be refrozen without danger.

**Shellfish:** Should be refrigerated and used up quickly.

**Cooked Dishes:** i.e. casseroles, should be refrigerated and used up.

**Large Pieces of Meat:** Can be re-frozen providing there are ice crystals remaining within them.

**Small Joints:** Should be cooked and then re-frozen as cooked dishes.

**Chicken:** Should be cooked and re-frozen as a fresh dish

## Hints and Tips

- Any opened packets of frozen food, should be rewrapped in airtight materials to prevent surface evaporation which causes drying or 'freezer burn'.
- Frozen food which is allowed to thaw accidentally should either be used immediately or thrown away. Alternatively if the food is uncooked and has not been completely defrosted it can be cooked and then refrozen.
- Aim to check dates on packets and rotate food regularly. Although storage longer than recommended is not harmful, flavours and textures begin to change.




# MAINTENANCE AND CLEANING

 *Before any maintenance or cleaning work is carried out DISCONNECT the appliance from the ELECTRICITY supply.*


## Internal Cleaning

Clean the inside and accessories with warm water and bicarbonate of soda (5ml to 0.5 litre of water). Rinse and dry thoroughly.

 *Do not use detergents, abrasive powders, highly perfumed cleaning products, wax polishes or cleaning products containing bleach or alcohol.*

## External Cleaning

Wash the outer cabinet with warm soapy water.

 *Do NOT use abrasive products. There are sharp edges on the underside of the product so care should be taken when cleaning.*

## To Defrost the Freezer

1. Wrap any food in layers of newspaper or blankets.
2. Switch the appliance off at the wall socket and remove the plug.
3. Open the freezer door.
4. Place a suitable container to collect the defrost water.
5. After defrosting, clean and dry the interior.
6. Switch the appliance on and replace any frozen food.



- Defrosting can be speeded up by putting bowls of hot (not boiling) water in the freezer and loosening the frost with a suitable plastic scraper.
- If the temperature of frozen food is allowed to rise during defrosting, its storage life may be shortened.

## When the Appliance is Not in Use

When the appliance is not in use for long periods, disconnect from the electricity supply, empty all of the food and clean the appliance, leaving the door ajar to prevent unpleasant smells.

# WHAT HAPPENS IF SOMETHING GOES WRONG

**BEFORE contacting your local service centre, check the following points:**

Symptom	Solution
No power to the appliance	Check there is power at the socket.
	Check there is not a power cut by checking the household lights.
	Check the fuse has not blown.
The temperature in the freezer section is too high	Check the ambient temperature is within appliances operating limits of 10 °C to 43 °C. Relocate the appliance if necessary.
	Check the thermostat is turned to the correct Setting relative to ambient conditions.
The freezer door will not open	- Has door just been opened? If so leave for a few minutes to allow the air pressure to equalise.
The compressor runs continuously	Adjust the thermostat to give correct temperature control. See page 5.
	Check that the door is closed.
	Large quantities of food have recently been placed in the cabinet / and or door is frequently opened.
	Check that air ventilation is not obstructed.
Excessive frost and ice has built up	Ensure the door is not left open.
	Check that nothing is preventing the door from closing.
	Is the door gasket intact and clean.
	Has advised periodic defrosting been carried out.
Noise	Refer to normal operating sounds.

If after the above checks there is still a fault call your authorised Service Centre.

In-guarantee customers should ensure that the above checks have been made as charges will apply if the fault is not a mechanical or electrical breakdown.

Please note that proof of purchase is required for in-guarantee service calls.

# Door Reversal

 
The side at which the door opens can be changed from the right side (as supplied) to the left side, if the installation site requires.

**⚠ Warning!** When changing the side at which the door opens, the appliance must not be connected to the mains. Remove plug from the mains beforehand.

Tilt the appliance slightly towards the rear and prop it securely.

Unscrew the door hinge screws and remove the hinge pin bracket .


Open the door a little way and take it out downwards.

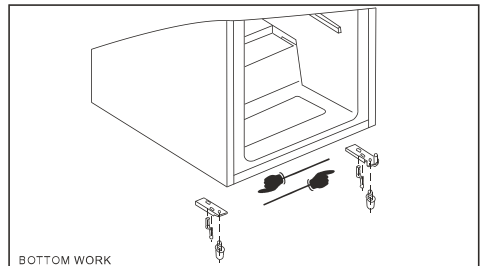

Unscrew the upper pin and screw it into place on the opposite side.

Fit the door into the upper pin and close it.

 Screw the hinge pin bracket securely into place on the opposite side using the screws .

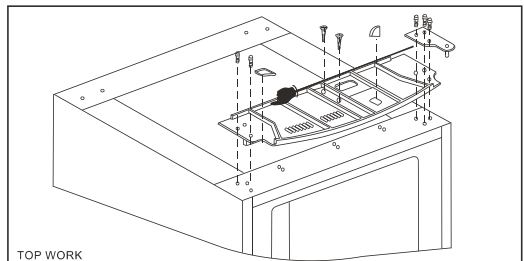

## Installation Requirements

To ensure correct operation this appliance must not be located where the temperatures will fall below 10°C or rise above 43°C

Avoid the following locations: unventilated kitchen, outhouse, conservatory, garage. For correct operation this appliance must be installed:

- In a dry atmosphere.
- Out of direct sunlight.

 
Away from extreme temperature (not next to a cooker or other sources of heat).

Your appliance will be heavy when loaded with food and must therefore be stood on a strong firm floor.

## Ventilation Requirements

Gently push into place until the back of the freezer keeps a required distance from wall. When in position a 100 mm clear space above the appliance should be maintained.

If space above the appliance is not available, clearance of 50mm should be maintained on both sides.

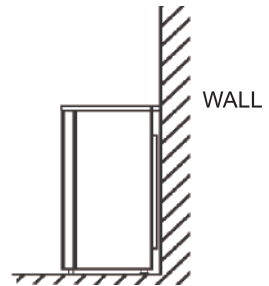

 *Ensure that the appliance does not stand on the electrical supply cable.*


*Parts which heat up should not be exposed. Whenever possible, the back of the appliance should be close to a wall but leaving the required distance for ventilation.*


## Levelling

 The appliance should be level, to eliminate rocking:

Ensure the appliance is upright and both adjusters are in firm contact with the floor so that the cabinet is level.

Adjust the level by screwing out the appropriate level adjuster at the front, (use your fingers or a suitable spanner).

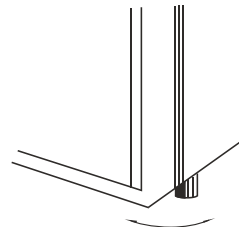

 *This appliance is heavy. Care should be taken when moving it.*

\* For the detailed specifications , please refer to the nameplate at the back of the freezer. The specifications are subject to change without prior notice.

## **Warnings - Please refer to warranty card**

- \* This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- \* Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- \* Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.
- \* Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- \* Do not damage the refrigerant circuit
- \* Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

## **IMPORTANT DISPOSAL INSTRUCTIONS**



As a responsible retailer we care about the environment.

As such we urge you to follow the correct disposal procedure for your product and packaging materials, This will help conserve natural resources and ensure that it is recycled in a manner that protects health and the environment.

You must dispose of this product and its packaging according to local laws and regulations. Because this product contains electronic components and sometimes batteries, the product and its accessories must be disposed of separately from household waste when the product reaches its end of life. Contact your local authority to learn about disposal and recycling.

The product should be taken to your local collection point for recycling. Same collection points accept free of charge.

We apologise for any inconvenience caused by minor inconsistencies in these instructions, which may occur as a result of product improvement and development.

## **SERVICE AND WARRANTY**

You will be covered by a 2-year manufacturer's in-house warranty

Your freezer is guaranteed against faulty materials and assembly. In the event that warranty service is required, the information provided in this instruction book and the warranty card should be followed. The Warranty Card should be completed at time of purchase and retained with your receipt in the event that warranty service is required.

SERVICING AGENTS: - AWA

Tel: 1300 366 144

GAF Control (Sales) Pty Ltd  
18 Taras Avenue (PO Box 19)  
Altona North, Victoria, 3025  
Tel: 1300 767 041

**READ AND SAVE THESE INSTRUCTIONS**

# SMALL APPLIANCE WARRANTY

## WARRANTY STATEMENT TERMS & CONDITIONS

**This product is warranted against faulty workmanship for a period of 12 months when the product is used for domestic use from the original date of purchase. This Warranty is additional to the conditions and guarantees which are mandatory as implied under the Trade Practices Act 1974 (and relevant State and Territory Legislation)**

Proof of purchase (i.e. bill of sale, invoice, bank statement/credit card statement or purchase receipt) must be presented to receive the benefit of the Warranty. The Purchaser is required to return the Product to the place of purchase. In the event that the Purchaser cannot return the product to the place of purchase, the products may be returned to G.A.F at the addressed details provided below. The Warranty does not extend to re-installation costs, delivery, handling, freighting, transportation and insurance of the product. This Warranty will not apply if;

The defect claimed is not due to faulty or defective parts or workmanship

The Product has not been installed, operated, maintained or used in accordance with the manufacturers instructions or specifications provided with the Product;

The factory applied serial number has been altered or removed from the Product;

The product has been damaged, has malfunctioned or failed from alterations, accident, misuse, abuse, fire, liquid spillage, mis-adjustment of customer controls, use on an incorrect voltage, power surges and dips, thunderstorm activity, acts of God, voltage supply problems, water quality, flow or supply problems, unauthorized modification or repairs of any kind, exposure to abnormal corrosive conditions or entry by any insect, vermin or foreign object;

The Product is damaged during transportation or installation;

The Product has been damaged due to excessive wear and tear.

G.A.F will not be liable for any loss or damage arising from loss of use, loss of profits or revenue, or for any other resulting indirect or consequential loss or damage. G.A.F is not liable for any installation or related costs (including plumbing costs) in the event that repair (or replacement) of the Product is required. If you have any enquiries with the respect to operation of the Warranty please contact the retailer from whom you purchased the Product or call

G.A.F Control (Sales) Pty. Ltd,  
03 8368 0600  
18-28 Taras Ave  
Altona North  
Victoria, 3025  
Gaf@gafcontrol.com.au

